
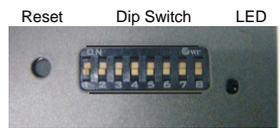


# BENZ (NTG4.0) WIRING DIAGRAM --LDS-NTG40-CP

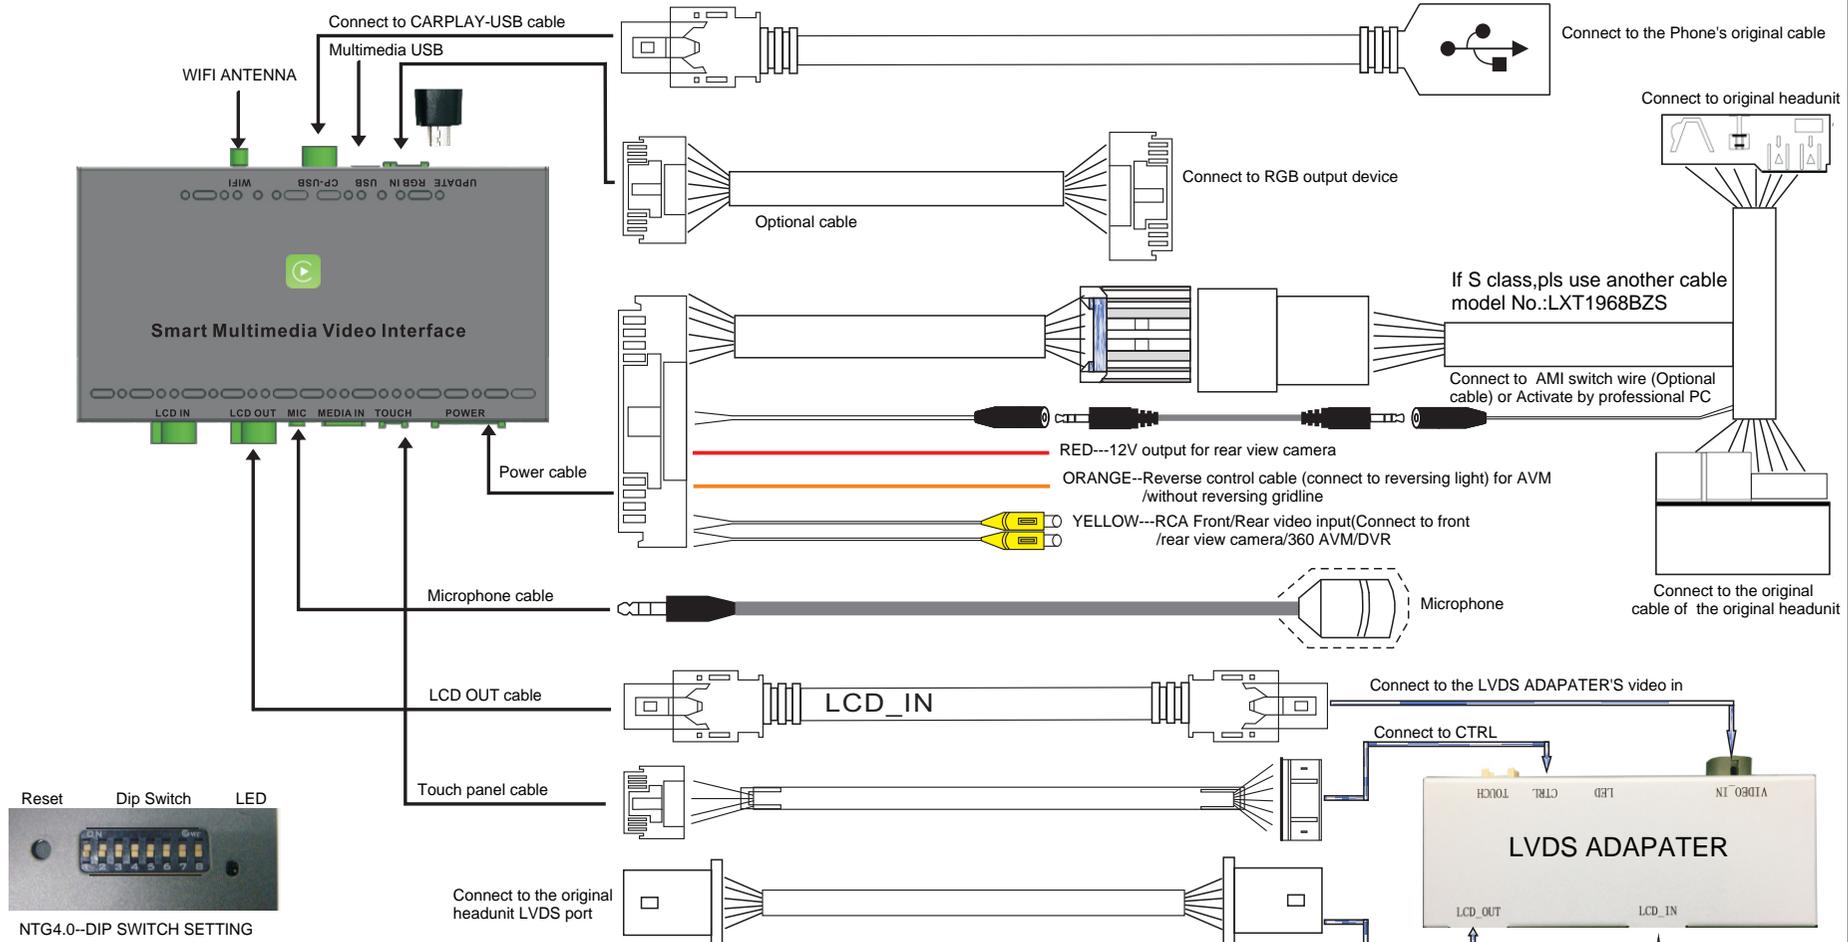

NTG4.0--DIP SWITCH SETTING

(After changing the dip code,press "reset"or power-on again)

DIP S/W	Status	Description
PIN 1,2	OFF/ON	NG/7inch Telescopic screen
PIN 1	OFF/ON	NG/5.8inch screen
PIN 2	OFF/ON	NG/7inch screen
PIN1,3	OFF/ON	NG/8inch screen for S class
PIN 4	OFF/ON	Reversing gridline/Enable 360 panoramic
PIN 5	OFF/ON	NG / NG
PIN 6	OFF/ON	Rear view camera CVBS input / RGB input
PIN 7	OFF/ON	NG / NG
PIN 8	OFF/ON	After market rear camera / Original rear camera

**REMARK:**Please keep in the AUX interface when switch the CarPlay interface



- 1) Long press and hold "M" button to switch MENU,short press "C" button again,exit MENU.
- 2)Short press "C" or "TEL" button to open "Siri".
- 3) Knob to control up/down/right/left/ok.



**AUX Connector**  
Pls plug it into the original AUX in port