
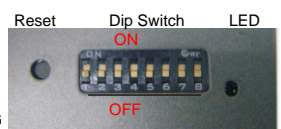


# BENZ (NTG4.5/4.7&NTG5.1/5.2/5.5) WIRING DIAGRAM ---- LDS-NTG45-CP/LDS-NTG50-CP

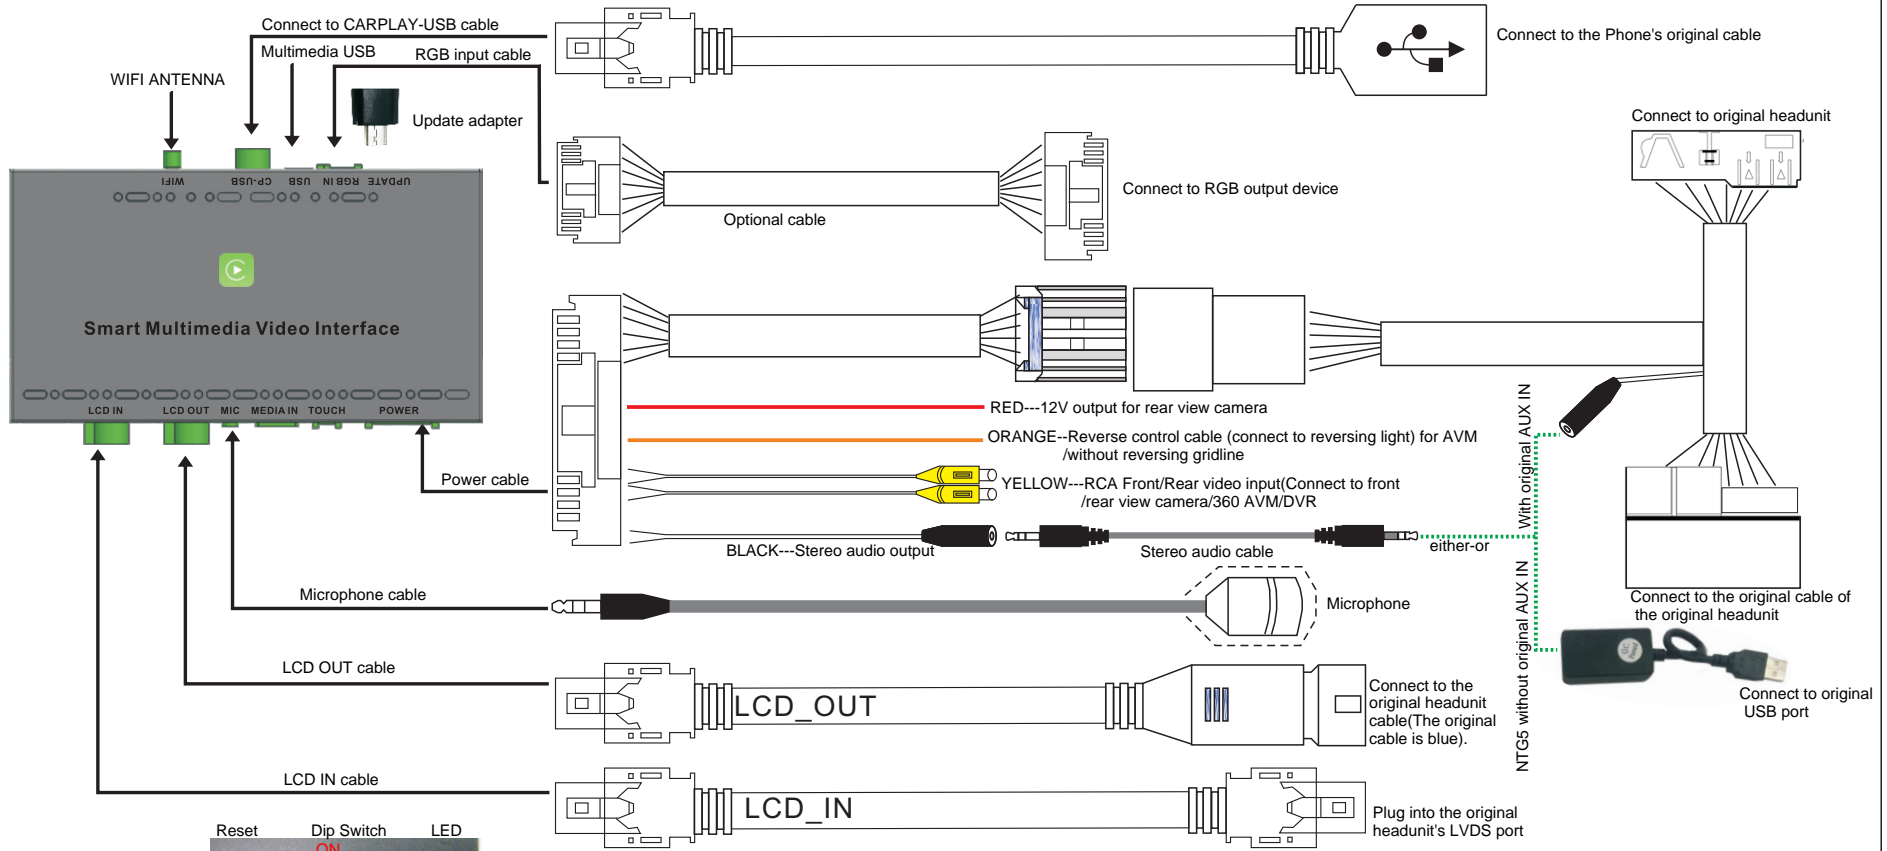


**NTG4.5/4.7--DIP SWITCH SETTING**  
(After changing the dip code,press "reset"or power-on again)

DIP S/W	Status	Description
PIN 1	OFF/ON	7inch (800*480) / 5.8 inch (480*234)
PIN 2	OFF/ON	NG / NG
PIN 3	OFF/ON	NG / NG
PIN 4	OFF/ON	Reversing gridline/Enable 360 panoramic
PIN 5	OFF/ON	NG / NG
PIN 6	OFF/ON	Rear view camera CVBS input / RGB input
PIN 7	OFF/ON	NG / NG
PIN 8	OFF/ON	After market rear camera / Original rear camera

**NTG5.1/5.2/5.5--DIP SWITCH SETTING**  
(After changing the dip code,press "reset"or power-on again)

DIP S/W	Status	Description
PIN 1, 2	OFF/ON	15-18 C class 7 inch / 15-17 S class 12.3 inch
PIN 2, 3	OFF/ON	NG/15-17 S class 12.3 inch with other parameters
PIN 1	ON	15-18 year,all BENZ models with 8.4inch monitor
PIN 2	ON	15-18 A/B/E/CLA/GLE class with 7 inch monitor
PIN 4	OFF/ON	Reversing gridline/Enable 360 panoramic
PIN 5	OFF/ON	NG / NG
PIN 6	OFF/ON	Rear view camera CVBS input / RGB input
PIN 7	OFF/ON	NG / NG
PIN 8	OFF/ON	After market rear camera / Original rear camera

**REMARK:**Please keep in the AUX interface when switch the CarPlay interface

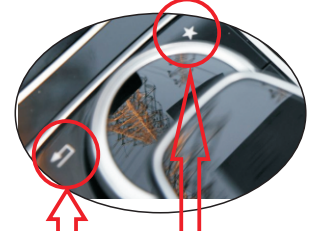

- 1) Long press and hold "C" button to switch MENU,short press "S" button again,exit MENU.
- 2) Short press "C" or "S" button to open "Siri".
- 3) Knob to control up/down/right/left/ok.