


# BMW (CCC) WIRING DIAGRAM--LDS-CCC-CP

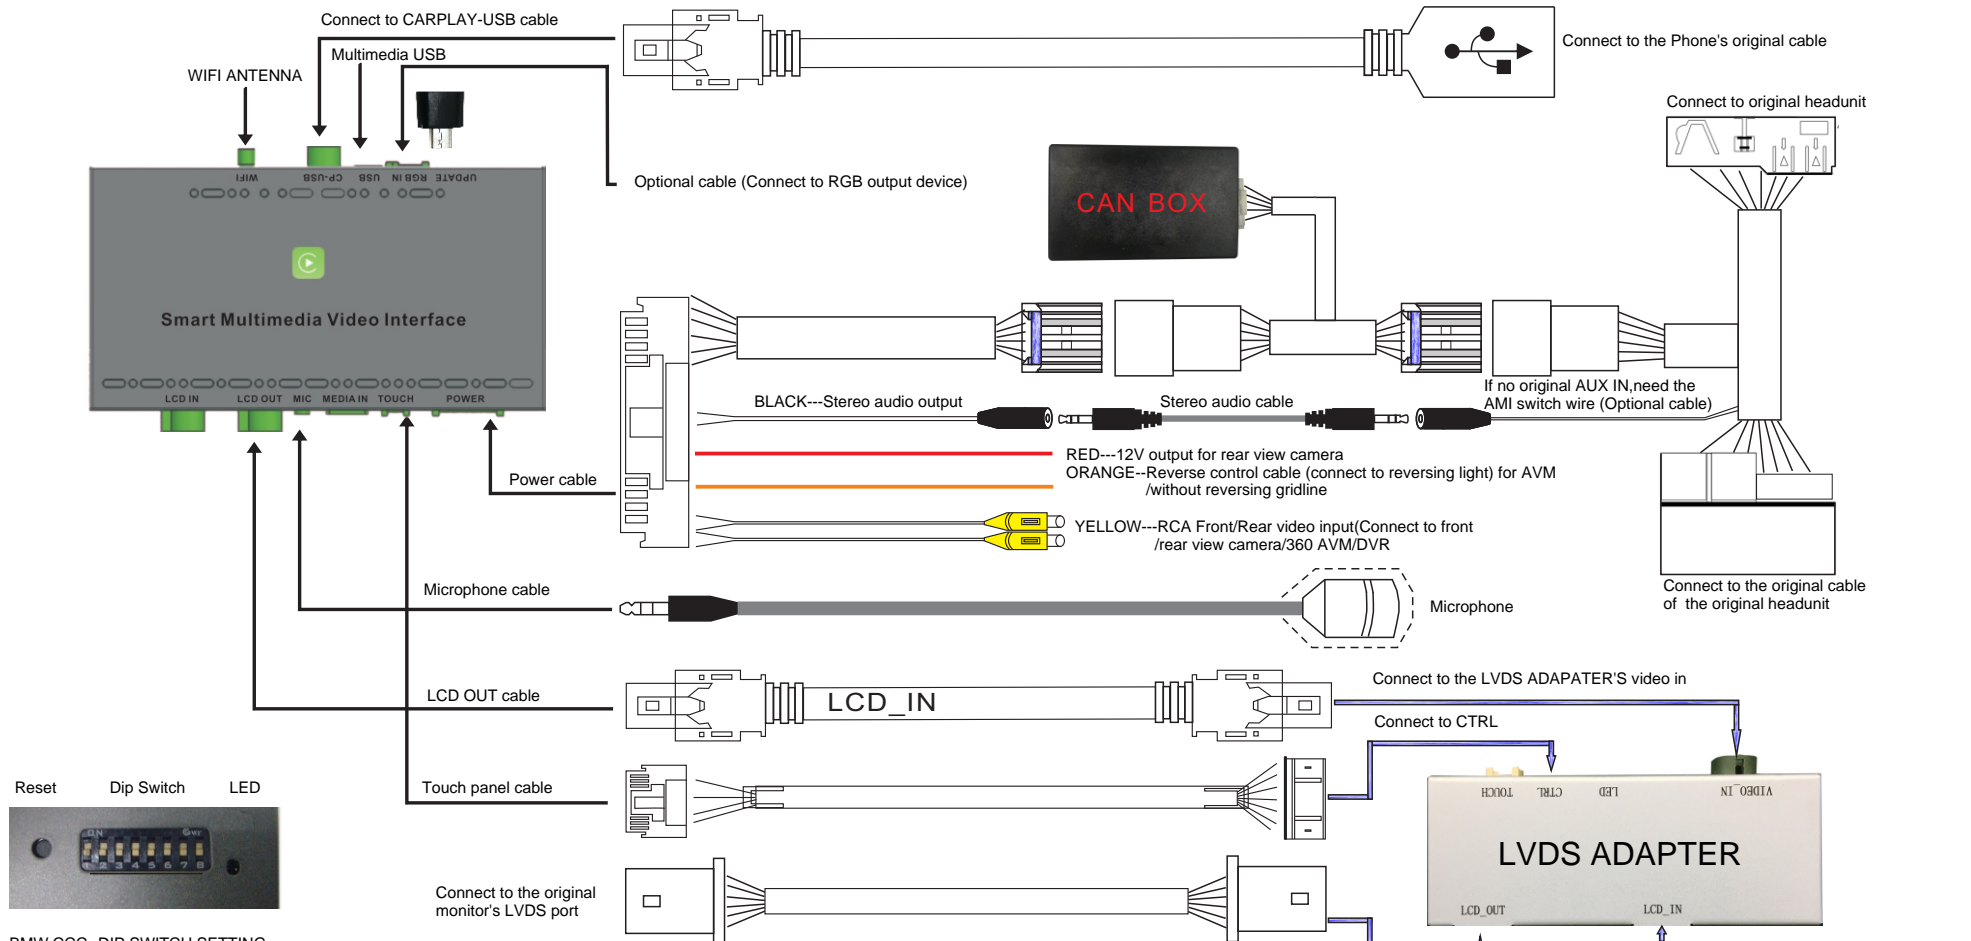

BMW CCC--DIP SWITCH SETTING  
(After changing the dip code, press "reset" or power-on again)

DIP S/W	Status	Description
PIN 1	OFF/ON	8inch screen/NG
PIN 2	OFF/ON	NG / NG
PIN 3	OFF/ON	NG / NG
PIN 4	OFF/ON	Reversing gridline/Enable 360 panoramic
PIN 5	OFF/ON	Automatic Knob/Manual Knob
PIN 6	OFF/ON	Rear view camera CVBS input / RGB input
PIN 7	OFF/ON	NG / NG
PIN 8	OFF/ON	After market rear camera / Original rear camera



- 1) Long press and hold "MENU" button to switch MENU, long press "MENU" button again, exit MENU.
- 2) Short press "▲" button to return, and Knob to control up/down/right/left/ok.
- 3) SWC "▼" and "▲" can control next and forward.
- 4) Short press Knob button down to open "Siri".



AUX Connector:  
Pls plug it into the original AUX IN port