


BMW (EVO) WIRING DIAGRAM ---LDS-EVO-CP


--- For BMW Professional EVO (ID5/ID6) with big headunit and special LDS-LX1-LVDS cables

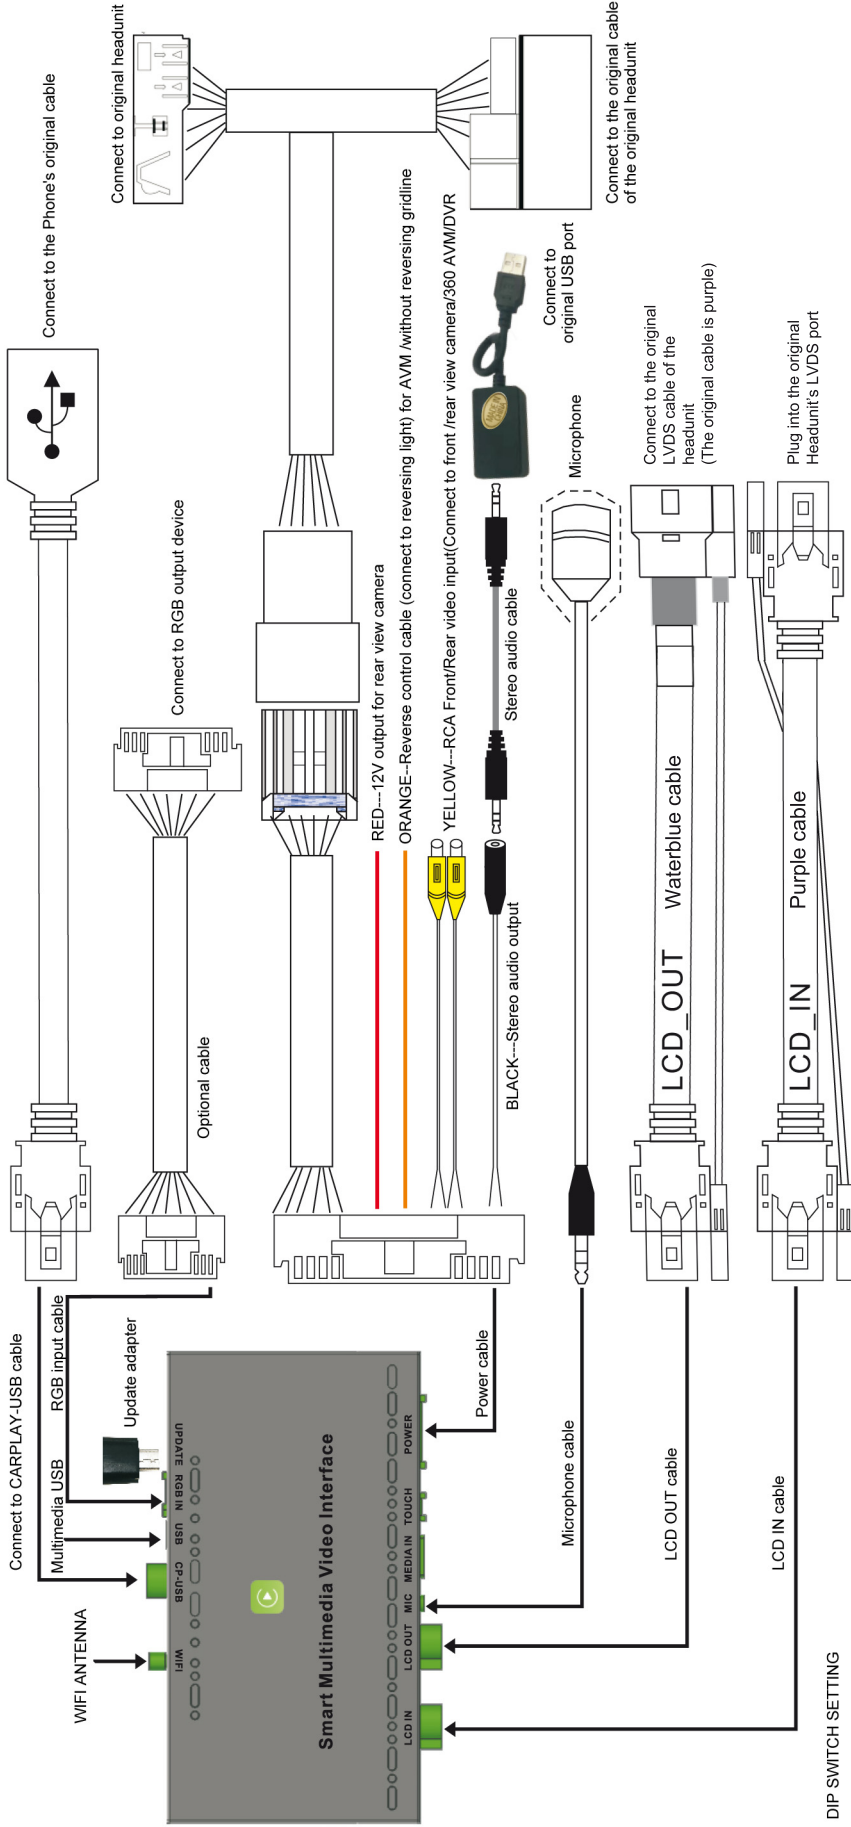

DIP SWITCH SETTING

(After changing the dip code, press "reset" or power-on again)

PIN 1,3	OFF/ON	NG / BMW 10.25 inch
PIN 1	OFF/ON	BMW 8 inch / BMW 6.5 inch
PIN 2	OFF/ON	NG / NG
PIN 3	OFF/ON	NG / NG
PIN 4	OFF/ON	Reversing gridline/Enable 360 panoramic
PIN 5	OFF/ON	NG / NG
PIN 6	OFF/ON	NG / NG
PIN 7	OFF/ON	NG / NG
PIN 8	OFF/ON	After market rear view camera/Original rear view camera

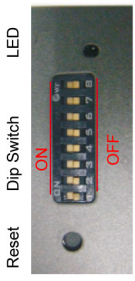

REMARK: Please keep in the original AUX interface when switch the CarPlay interface.!!



- 1) Long press and hold "BACK" button to switch MENU, long press "BACK" button again, exit the switch MENU.
- 2) Short press "MENU" button to open "Sir".
- 3) Drive knob to control up/down/right/left/ok.